




[PRO STAGE EFFECTS]

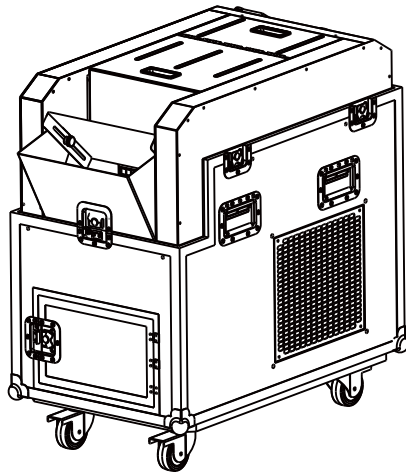

H-R1 USER MANUAL

SPEED-CHANGING CONFETTI MACHINE

◆ Foreword

Thank you very much for choosing DJPOWER H-R1 Speed-Changing Confetti Machine. This is a newly designed confetti jet machine. Before start operating, we strongly suggest you read the user manual carefully. Following the instructions here will ensure your safety while operating the machine, easily achieve the best effect, as well as understand the right way to care for and maintain the machine, hence to prolong the product life cycle.

◆ Products Description

This is a newly designed confetti machine with worldly unique confetti-transit technology developed by DJPOWER. Propelled by powerful wind, it can launch confetti to 20 meters high, very suitable for large performance.

We only create the professional new products for you. Get away from the inconvenient and low-end round-shape confetti machine!

◆ Products Features

1. Bilingual (Chinese and English) display, easier to use;
2. With integrated flight case, very rugged;
3. With DMX to adjust confetti output;
4. With unique roll paper conveying patent technology to output confetti smoothly and equably;
5. LCD control interface, support controlling by DMX-512.



Due to the powerful wind, in order to avoid the unnecessary damage, please keep away from the spraying nozzle and make sure no substances falling to the nozzle before operating the machine.

CAUTION!

Please note that the confetti can rub off when it comes into contact with moisture. Therefore, please only use confetti in or on dry, non-sensitive surroundings and surfaces.

We assume no liability for damage resulting from disregard of these and other safety instructions in the operating instructions.

◆ Safety use

1. Keep the fixture dry. For indoor and outdoor used.
2. Use grounded electrical outlet. Prior to use, make sure that unit is installed at the rated voltage.
3. Turn off or unplug when not using it.
4. This machine is not water-proof. Please keep it away from moisture and water. If moisture, water, or fluid gets inside the housing, stop using it.

5. No user serviceable and modifiable parts inside. Do not disassemble the housing and do any modification, otherwise it might cause damage to the unit or danger of burning.
6. For adult use only. Fixture must be installed out of the reach of children. Never leave the unit running unattended. Keep it away from fire, combustible and flammable materials.
7. Position the machine in well-ventilated area. Please leave about 50cm spaces surrounding the unit.
8. Please do not use the fixture under high temperature.
9. If something wrong happens while using, please stop the fixture immediately, cut off the power, and check the fuse, power cable and power plug. If problem could not be resolved, please contact with your dealer.

◆ **Opening the package and inspecting the machine**

Please make sure the machine is in good condition after opening the package. If there is any damage, please contact with your dealer directly and do not power on the machine.

◆ **The following parts should be included when you receive the package:**

1. One H-R1 Speed-Changing Confetti Machine
2. One Power Cord
3. One User Manual

◆ **Operating instructions**



1. When plug into the socket, up the breaker, now the machine is powered.
2. This machine supports 2 DMX channels, the channel table is as follows:
 Channel 1: Confetti output speed
 0-4 OFF; 5-255 Confetti feeding speed becomes faster
 Channel 2: Safety channel
 0-49 OFF; 50-200 ON; 201-255 OFF, only when the safety channel setting is ON, the channel 1 control function is effective
3. Press the “start/ shut down” button, the fan starts working, and the motor door will open, then the motor delivering confetti will start working after 4s, now press the “start/ shut down” button again, then the fan and motor delivering confetti will stop working, when the motor door closes, the machine will stop working.


Technical parameters

Model: H-R1

4. Input Voltage:	AC 380V 50Hz
Total Power Consumption:	2,300 W
DMX-512:	✓
The Longest Lasting Time:	90 s
Max Output Height (at 90°):	20 m
◆ Max Output Distance (at 45°):	30 m
Max Output coverage:	300 m ²
Net Weight:	103.6 kg
Gross Weight:	107.7 kg
Machine Dimensions:	891.2 × 541.9 × 968 mm mm
Packing Dimensions:	965 × 610 × 995 mm

◆ **Diagram**

1. Removable cover
2. Handle
3. Spraying nozzle
4. Storage room
5. 3-pin DMX socket
6. 5-pin DMX socket
7. On/off button
8. LCD display
9. Power switch
10. Power cable
11. Transfer Switch
12. Buckle lock
13. Handle
14. The air inlet grid
15. Trundle with lock

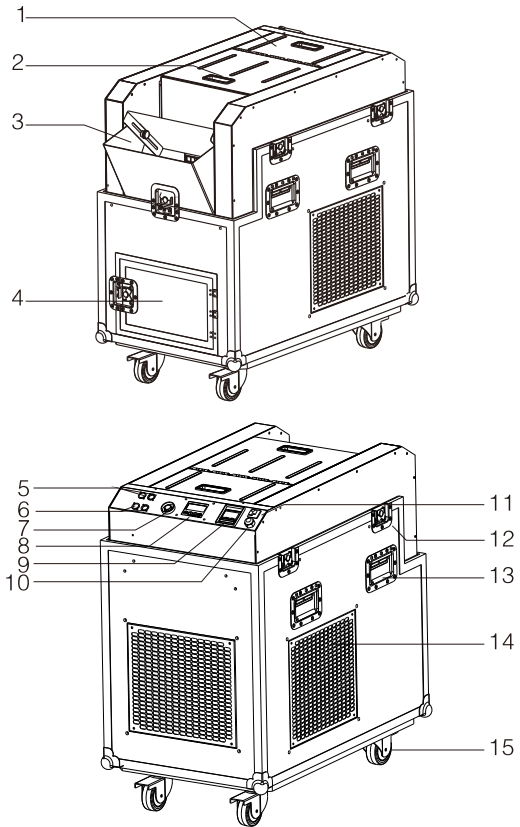

Note: The fan forward and reverse rotation switch allows the machine to rotate forward and reverse. When the machine power cord is connected to 380V, the wrong phase sequence will cause the fan to rotate in reverse. This switch can directly allow the machine's fan to rotate forward and operate. Simple and convenient, no rewiring required.